

# QUICK START GUIDE

## Echorus

### OPTICAL CHORUS + DOUBLER

#### SPEED:

SETS THE RATE OF MODULATION FROM SLOW TO VERY FAST.

#### DEPTH:

LETS YOU ADJUST THE AMPLITUDE OF THE MODULATION. IN OTHER TERMS, HOW MUCH MODULATION YOU WANT.



#### D TIME:

ADJUSTS THE TIME OF THE ECHO (35-55MS)

#### TOGGLE:

LEFT POSITION: LETS THE DRY SIGNAL BEING MIXED WITH THE DELAYED AND MODULATED SIGNAL.

RIGHT POSITION: KILLS THE DRY SIGNAL FROM THE EFFECT.

#### RECOMMANDATIONS:

- FOR A REGULAR GENTLE CHORUS SOUND, SET THE "DEPTH" AT 11 O'CLOCK AND THE "D TIME" AT MINIMUM.
- WITH SAME SETTING, FLIP THE KILL SWITCH TO GET A REALLY WARM "VIBISH" SOUND.
- "D TIME" AT HIGH SETTING GIVES YOU A DETUNED EFFECT AND A DEEPER MODULATION.
- WIDE DOUBLER EFFECT WHEN ALL CONTROLS DOWN

**\* 9V ADAPTER REQUIRED (REGULAR CENTER NEGATIVE)**