

QUICK START GUIDE

The Pink Pit

ECHO TYPE DELAY

LIGHT:

THE "LIGHT" KNOB ADJUSTS THE BRIGHTNESS OF THE REPEATS. SET IT AT LEFT FOR DARK AMBIENCE AND AT RIGHT FOR A BRIGHT NOISY REPEAT.

ECHO:

THE "ECHO" KNOB ALLOWS YOU TO ADJUST THE LENGTH OF THE REPEATS UP TO 600 MILLISECONDS.



DEPTH:

THE "DEPTH" SETS THE NUMBER OF REPEATS. YOU CAN CHOOSE BETWEEN A SINGLE REPEAT TO INFINITE REPEATS.

AT MAX, YOU'LL REACH THE SELF OSCILLATION STAGE, RESULTING IN A COMPLETE WALL OF NASTY NOISE WHICH YOU CAN EASILY CONTROL BY TURNING DOWN THE KNOB A BIT.

RECOMMENDATIONS:

- AT SELF OSCILLATION STAGE, PLAY WITH THE "ECHO" KNOB TO MAKE SOME COOL PITCH CHANGES
- GET A SUPER SURF STYLE REVERB WITH VERY SHORT REPEATS, SUPER BRIGHT TONE, AND MEDIUM DEPTH
- TO GET CLEANER REPEATS AT LONG DELAY SETTING, USE ONLY THE LEFT POSITION OF THE "LIGHT" KNOB
- HOW FAR WILL YOU DWELL THAT PIT ?

*** 9V ADAPTER REQUIRED (REGULAR CENTER NEGATIVE)**