

QUICK START GUIDE

Wave Rider

TAP TEMPO TREMOLO

SIZE:


THE OVERALL GAIN OF THE PEDAL

FLIP:

THIS FUNCTION ALLOWS YOU TO MIRROR THE WAVE SHAPE AND TO TWIST IT AT YOUR EASE.

MULTI:

THE MULTIPLIER FACTOR OF THE TEMPO. GOES FROM HALF TO SIXTEENTH NOTES.

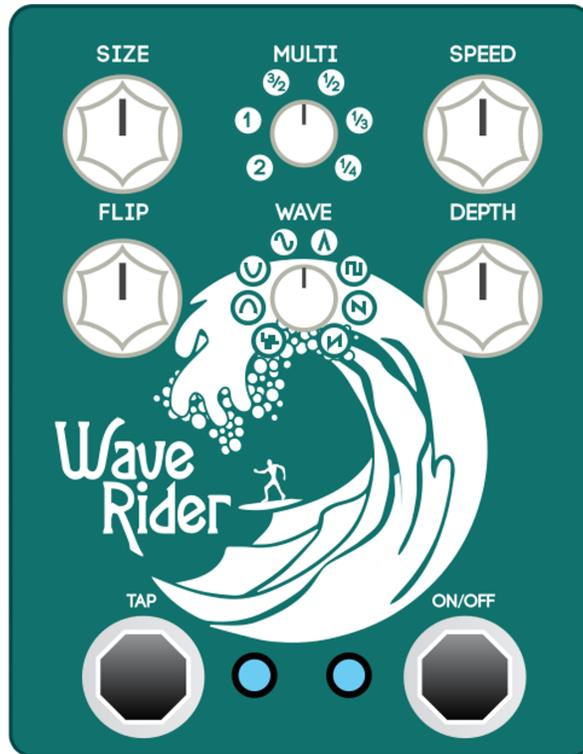

WAVE:

THIS LETS YOU RIDE YOUR FAVORITE WAVE SHAPE.

SPEED:

YOU CAN RIDE IT SMOOTHLY OR LIKE A SPEED BOAT.

DEPTH:

RIDE IT MODERATLY OR THE EXTREME WAY.

RECOMMENDATIONS:

- FOR A REGULAR TREM SOUND, CHOOSE THE SINE WAVE AND DIAL THE DEPTH KNOB AROUND 2 O'CLOCK.
- WE RECOMMEND TO PLUG THE 9V ADAPTER* PRIOR TO TURN ON THE EFFECT, AND TURN IT OFF BEFORE TO UNPOWER.
- WE SUGGEST TO START EXPLORING THE WAVE SHAPES WITH THE FLIP KNOB AT 12, THAT'S WHERE THEY'RE NOT DISTORTED.
- CHOOSE THE WAVE SIZE YOU'RE GONNA RIDE.
- LET'S RIDE THAT WAVE!

* 9V ADAPTER REQUIRED (REGULAR CENTER NEGATIVE)